


DEPEND ON
DAVEY

WATER PRODUCTS

INSTALLATION AND OPERATING INSTRUCTIONS SHALLOW WELL PRESSURE PUMPS & SYSTEMS

Models 95S, 125S, 165S

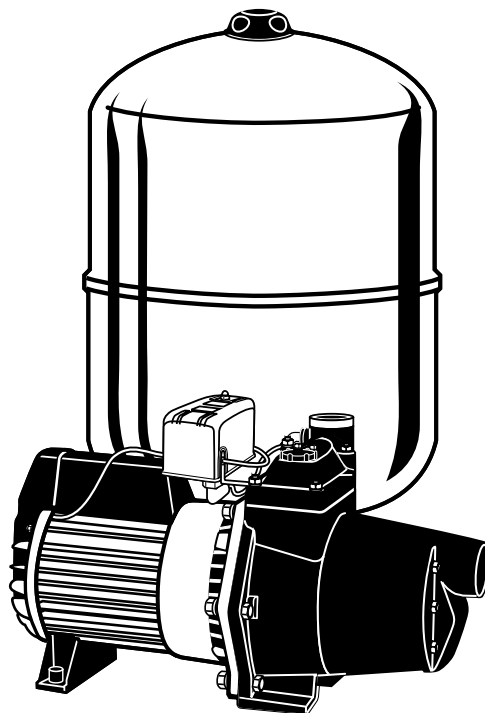

Read All Instructions First Before Commencing Installation of Your New Pump.

These instructions have been prepared to acquaint you with the correct method of installing and operating your Davey Pressure Pump or System. We urge you to study this publication carefully and follow its recommendations. If you have any installation difficulties, or need further advice, you should contact the Davey dealer from whom you purchased the system.

Should you be unable to obtain the required advice or resolve any problem through your local Davey dealer, please contact the Davey Customer Service Centre.

Introduction

Davey Shallow Well Pressure Pumps and Pressure Systems have been designed to operate from surface water or shallow wells up to 7.5m (25 ft.) deep.

Note: For automatic operation as a Pressure System installation, the appropriate Davey Pressure Tank is required in addition to your Pressure Pump.

Please pass these instructions on to the operator of this equipment.

Prior to using this pump you must ensure that:

- The pump is installed in a safe and dry environment
- The pump enclosure has adequate drainage in the event of leakage
- Any transport plugs are removed
- The pipe-work is correctly sealed and supported
- The pump is primed correctly
- The power supply is correctly connected
- All steps have been taken for safe operation

Appropriate details for all of these items are contained in the following Installation and Operating Instructions. Read these in their entirety before switching on this pump. If you are uncertain as to any of these Installation and Operating Instructions please contact your Davey dealer or the appropriate Davey office as listed on the back of this document.

Summary of Installation Procedure

For Automatic Operation as a Pressure System with Supercell Base Mounted Pressure Tank

- (1) Place tank next to pump as shown on the front of these instructions.
- (2) Connect Davey tank hose to bottom of discharge tee and tighten by hand (no thread sealant required).
- (3) Fit a gate valve to the 1¹/₄" outlet.
- (4) Fit suction line complete with check valve or foot valve.
- (5) Fit discharge line.
- (6) Fit pressure gauge (supplied with pump) at top of pump.

For Automatic Operation as a Pressure System with Supercell Top Mounted Tank

- (1) Fit a Davey three way tee piece (P/No 48638) into the priming hole on top of the pump. Ensure adequate thread tape is used.
- (2) Screw the Supercell pressure tank into the top of the three way tee using thread tape.
- (3) Perform steps (3) through to (5) above.
- (4) Fit the pressure gauge/priming plug to the horizontal outlet on the three way tee.

For Manual Operation

- (1) Disconnect pressure switch tube by undoing tubing nuts at outlet of pump and at pressure switch.
- (2) Tighten the cap on the bottom of the discharge tee.
- (3) Fit a gate valve to the 1¹/₄" outlet.
- (4) Connect suction pipe complete with check valve or foot valve.
- (5) Connect discharge pipe.
- (6) Fit pressure gauge (supplied with pump) at top of pump.

Housing Your Pressure Pump System

For best performance position the Pressure Pump as close to the water source as practical.

As the pump is an electrical apparatus, **it must be protected from the weather**, at the same time adequate ventilation must be provided for the motor. **Do not** enclose the pump in such a manner that a "hot box" condition is created. Ventilation should be provided near the top of any enclosure to prevent a 'build-up of condensation. Failure to protect your pump from weather as above may cause damage not covered by Guarantee.

The pump should be mounted on a firm base high enough to prevent any surface water from coming into contact with the unit. Positioning of the unit should allow the nameplate to be easily read, and adequate access for service purposes.



WARNING: Some insects, such as small ants, find electrical devices attractive for various reasons. If your pump enclosure is susceptible to insect infestation you should implement a suitable pest control plan.

Water Quality

Your Davey pump is made from food safe materials, and tested using sanitised water. Davey has no control over your pump once it leaves our warehouse.

For potable (drinking) water applications we recommend that you flush the pump with clean water prior to use.

Pipe Selection

Suction Piping

Polythene pipe is recommended for the pump suction as it provides flexibility, reduces the transmission of pump noises and provides a convenient method of disconnecting the pump without unions or the need to cut into the piping.

Total suction head consists of the actual vertical height lift from the water level up to the pump inlet connection, PLUS the frictional resistance of the suction piping and fittings. For best performance, position the pump as close to the water source as practical.

To reduce pipe friction and maximise flow, we recommend the use of Suction Pipe Sizes for lengths indicated in the table below.

These pipe sizes are based on the Static Suction lift (vertical lift) being no more than 6m (20 ft.). For more detailed advice and information regarding pipe sizes for longer suction situations or greater suction lifts please contact your Davey dealer or the Davey Customer Service Centre.

Minimum Suction Pipe Diameter Recommended

Suction Length Model	Up to 10m		Up to 30m	
	Metric	Imperial	Metric	Imperial
95S	40mm	1 1/4"	50mm	1 1/2"
125S	40mm	1 1/4"	50mm	1 1/2"
165S	50mm	1 1/2"	63mm	2"

Delivery Piping

Polythene piping which complies with the relevant Australian standard is recommended. Select the grade of pipe which has a pressure rating suitable for your application. Galvanised or PVC piping may also be used provided the pressure rating is adequate.

The pressure delivered by your Pressure Pump is reduced by the static delivery head (vertical height from pump to outlet point) plus the friction loss caused by the piping itself. Static delivery head reduces the available pressure from the pump by approximately 10kPa (1.4 psi) for every 1m (3.3 ft.) of head. The reduction in pressure due to pipe friction varies with the length, diameter and type of piping used, as well as the flow rate through the pipe. The larger the diameter pipe, the smaller the pressure drop by pipe friction.

The following pipe sizes are recommended for lengths up to 100m (330 ft.)

Minimum Discharge Pipe Diameter Recommended

Delivery Length Model	Up to 5m		Up to 30m		Up to 100m	
	Metric	Imperial	Metric	Imperial	Metric	Imperial
95S	32mm	1"	40mm	1 1/4"	50mm	1 1/2"
125S	32mm	1"	40mm	1 1/4"	50mm	1 1/2"
165S	40mm	1 1/4"	50mm	1 1/2"	63mm	2"

For more accurate information please contact your local Davey Dealer or the Davey Customer Service Centre.



The electrical connections and checks must be made by a qualified electrician and comply with applicable local standards.

Power Connection



In accordance with AS 3350.2.41 we are obliged to inform you that this pump is not to be used by children or infirm persons and must not be used as a toy by children.

Single Phase

A power connection point should be provided by a qualified electrician within the pump housing.



Power connections and wiring must be carried out by an authorised electrician, in compliance with applicable local standards.

Single phase Models are rated for 220/250 volts, 50 Hz operation, and may be connected to a standard 10 amp power outlet.

All single phase Models have automatic re-set thermal overload protection built in, i.e. should overload on motor cause thermal to open circuit and switch motor off, it will automatically re-set and switch motor on when motor has cooled down sufficiently, usually within a few minutes.



WARNING:
Automatic reset thermal overloads will allow the pump to restart without warning. ALWAYS disconnect the pump motor from the electrical supply before maintenance or repairs.

- Note:
1. Long extension leads should be avoided as they often have insufficient current carrying capacity to run electric motors, hence they can cause substantial voltage drop and operating problems.
 2. Minimum voltage at the electric motor must not fall below 216.
 3. If the electrical fittings in your country make it necessary to remove the plug from the lead fixed to the motor care should be taken to ensure that the earth conductor green/yellow in the lead is properly connected to a good earth. This work must only be undertaken by an authorised electrician.

Three Phase

Model 165S only is also available as 3 phase model for 50Hz, nominal 415volt power supply. A recommended wiring diagram can be found inside the capacitor cover (see figure one below). Three phase units must be wired in by an authorised electrician in conjunction with a contactor which has "quicktrip" overloads set at nameplate current.

Davey recommend the use of overloads which also have the ability to detect "single phasing" or "dropped phase" conditions in the power supply.

Three phase 165S Pressure Pump models have been designed to allow for connection either side of the Capacitor Cover (marked "A" in figure one) on the motor. (NOTE: Three phase motors do not have capacitors fitted in the Capacitor Cover).

This is achieved by way of either of the two 19mm access holes (marked "B" in figure one). The access holes are designed to accept most standard cable grommets. The unused hole can be sealed by inserting the plug enclosed with the pump. To connect a three phase Pressure Pump start by removing the Terminal Cover ("C").

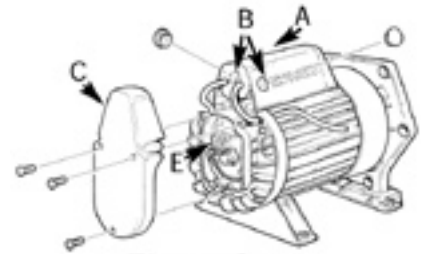


Figure One

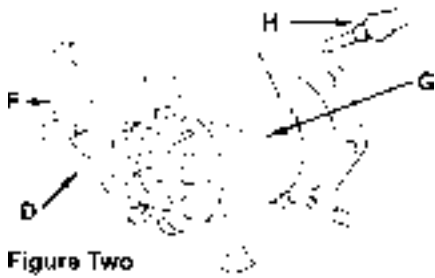


Figure Two


A short four core flex ("D") is fitted from the motor terminals ("E"). This lead is inserted through the blanking grommet ("F"). Pressure switch or other control leads ("G") can be fitted as well. Incoming power ("H") can be fitted through the preferred access hole, and terminated as shown in Figure Three. A termination kit is available if required.



Figure Three


Insert the blanking grommet ("F") into the capacitor cover ("A"). Fix the short lead ("D") into the path provided in the non-drive endshield and replace the terminal cover ("C").

IMPORTANT NOTE: THREE PHASE MODELS ONLY

 Before finalising wiring connections, check that motor rotates in direction of arrow (clockwise when shaft is viewed from wiring connection end). To alter rotation, change any two power leads at motor terminals.

When the unit is connected and operating the phase balance should be checked. This should be within 5% variation. "Rolling" the leads may help to improve a small unbalance, but major phase unbalance will usually be attributed to an input power unbalance. This must be addressed before the pump is used.

 Power connections and wiring must be carried out by an Authorised Electrician.


 Note: Minimum three phase voltage supply at the motor must not fall below 374 volts, otherwise motor damage may result which is not claimable under Guarantee.

INSTALLATION

Allow possible removal of the pump at some future date when attaching piping. (e.g. flexible hose and clips, pipe union etc.).

The use of thread seal tape on all pump connections is recommended as some sealing compounds may affect plastic.

Suction Connections

 Note: Air leaks in suction piping are THE BIGGEST cause of operating difficulties, and are hard to detect because the problem is air leaking INTO the pipe. There may be no external sign of the leak.

Suction piping should be laid so there is a constant rise from the water source to the pump. Any high spots will cause air pockets to form and reduce the efficiency of the system, as well as creating priming difficulties.

For installations which involve unavoidable high spots in the suction pipe, a "riser" for priming may overcome the problem.

(A) Installations to Water Sources Below Pump

A foot valve must be used on the end of the suction pipe for all below ground installations. For optimum pump operation and priming, ensure that the suction pipe is level, or rises evenly from the water source to the pump.

(B) Installations to Water Sources Above Pump (e.g. Water Supply Tank)

To allow sediment to settle and not enter the pipe to the pump, the outlet from the supply tank should be 50mm (2") above the bottom. The outlet from the supply tank should be at least 38mm (1 1/2") diameter, and fitted with a gate valve.

For Pressure System Installations, a check valve must be fitted to the supply tank outlet, alternatively, this check valve may be installed at the pump rather than at the tank outlet.

Delivery Connections



A gate valve must be fitted at the outlet of all pumps prior to the connection of outlet piping.

(A) Pumps to be Operated as Automatic Pressure Systems:

BASE MOUNTED TANKS USED

- Connect hose from Davey Supercell Pressure Tank to bottom of outlet tee on pump. Firm hand tight should be sufficient. Ensure tank connection hose is not kinked.
- Fit gate valve to outlet tee of pump using thread seal tape.
- Connect delivery piping at gate valve.

TOP MOUNT TANKS

- Fit the Davey three way tee piece (P/No 48638) into the priming hole on top of the pump. Ensure adequate thread tape is used.
- Screw the tank into the top of the three way tee using thread tape.
- Fit gate valve to outlet tee of pump using thread tape.
- Connect delivery piping at gate valve.



NOTE: The use of small size pressure tanks may lead to a higher rate of pump cycling. Consult your Davey dealer as to the suitability of the tank size to your application.

- Fit the pressure gauge/priming plug to the horizontal outlet on the three way tee.

(B) Pumps to be Operated Manually at Power Point:

- Disconnect pressure switch tube by undoing tube nuts at pump outlet and at pressure switch.
- Tighten the cap on the bottom of the discharge tee.
- Fit gate valve to pump outlet (1 1/4" Female) using thread seal tape.
- Connect delivery piping at gate valve.
- Fit pressure gauge on top of pump. A non-return valve may need to be fitted in the delivery piping on some installations to prevent water cascading back through the pump. Consult your Davey Dealer or the Davey Customer Service Centre.

Pressure Tank Pre-Charge (Applicable to Pressure System Installation Only)

The Davey Supercell Pressure Tank requires the correct pre-charge of air for satisfactory operation. This pre-charge of air is determined by the cut in pressure switch setting required for the particular system purchased. Check and adjust if necessary. When a higher than standard pressure switch setting has been made, add air at the valve on top of the tank until the pressure is 15kPa below cut-in. Adjust this pre-charge BEFORE operating the pressure system.

Priming the Pump

(A) When Installed on Water Sources Below Pump

Close gate valve at pump outlet. Remove the priming plug and fill pump body and suction pipe by pouring water into the priming port on top of the pump. Air will be expelled, as the suction pipe is filled with water. When all air has 'bubbled' out, replace the priming plug.



Do not run the pump without water.

(B) When Installed on Water Sources Above Pump

Close gate valve at pump outlet. Remove the priming plug and fill the pump body by opening the gate valve on the supply tank to allow water to flow into the pump. When the pump body is full and all the air bubbles have been expelled, replace the priming plug.



Do not run the pump without discharge flow (closed head).

Operating the Pump

1. Open nearest outlet tap.
2. Switch on power to pump.
3. Crack open gate valve at pump outlet to bleed trapped air from pump and pipework.
4. Allow pump to run until a change in sound of pump indicates that prime is established and pressure gauge reading rises over 350 kPa.
- 4a. If pressure fails to rise, switch off pump power and repeat priming.
5. Slowly open gate valve at pump outlet. A strong flow of water should be evident at an outlet tap indicating pump is functioning.
- 5a. If there is NO strong flow of water at the outlet tap, or the pressure gauge reading drops to 0, it may be necessary to re-prime the pump. On long suction lines it may be necessary to re-prime several times to expel all the air from the suction line to allow the pump to operate efficiently.
6. Open all taps in discharge pipe work.
7. Adjust gate valve at pump outlet so that pressure on gauge remains above operating pressure (standard 260kPa). Refer Table for operating pressure of Models supplied with higher pressure jet kits.

To Check for Correct Operation as Automatic Pressure System


Close all outlet taps except one which should be turned on to allow small flow. Pump should build up pressure until it switches off automatically at the cut-out pressure setting of the pressure switch (standard setting 380kPa, refer Table for others). Pressure should then fall slowly as water flows from the one outlet tap until pump switches on automatically at cut-in setting of pressure switch (standard setting 260kPa).

Pressure Switch

The pressure switch fitted to your Pressure Pump is required to function only if your pump is to operate automatically, in conjunction with a Davey Supercell Pressure Tank.

Adjustment (if applicable)


The standard operating pressure and respective pressure switch setting for each Model is denoted by an asterisk (*) in the Table below. Performances at pressures higher than standard are obtainable by fitting alternative shallow well jet kits, and for these installations it is necessary to reset the pressure switch according to the Table below. Instructions for altering the pressure switch setting are under the cover of the switch itself.


	Power connections and wiring must be carried out by an Authorised Electrician.
--	---


Pressure Switch Setting when installed as Automatic Pressure System


Model	Jet Kit	Pressure System		Pressure Switch Settings			
		kPa	psi	kPa		psi	
				Cut-In	Cut-Out	Cut-In	Cut-Out
95S	690*	260*	38*	260	380*	38	55*
	691	340	49	340	510	49	74
125S	693*	260*	38*	260	380*	38	55*
	694	340	49	340	510	49	74
	695	410	59	410	590	59	85
165S	697*	260*	38*	260	380*	38	55*
	698	340	49	340	510	49	74
	699	480	70	480	660	70	96

*Standard configuration. NB: 'psi' figures are an approximation of the kPa figures.


	*NOTE: For protection, the Davey pump motor is fitted with an automatic reset thermal overload, constant tripping of this overload indicates a problem e.g. low voltage at pump, excessive temperature (above 50°C) in pump enclosure.
--	---

	WARNING: Automatic reset thermal overloads will allow the pump to restart without warning. Always disconnect the pump motor from the electrical supply before maintenance or repairs.
--	--

	WARNING: When servicing or attending pump, always ensure power is switched off and lead unplugged. Electrical connections should be serviced only by qualified persons.
--	--

	Care should also be taken when servicing or disassembling pump to avoid possible injury from hot pressurised water. Unplug pump, relieve pressure by opening a tap on the discharge side of the pump and allow any hot water in the pump to cool before attempting to dismantle.
--	---

	IMPORTANT: DO NOT USE petroleum based fluids or solvents (e.g. Oils, Kerosene, Turpentine, Thinners, etc) on the plastic pump components or seal components.
--	---

	WARNING: Do not use hydrocarbon based or hydrocarbon propelled sprays around the electrical components of this pump.
--	---

Maintenance

Applicable for Models Operated as Pressure Systems Only

The only regular maintenance necessary is to check the air charge in the pressure tank. It is recommended that this be carried out every 4 - 6 months as follows:

1. To check air charge pressure, switch off the electric power to the pump. If the water level in your supply reservoir is higher than the pump, also close the gate valve to prevent water entering the pump.
2. Drain water from the pump by opening a convenient tap.
3. When all the water (and hence pressure) has been released from the pump, pressure tank and piping, check air charge pressure at air valve on top of tank using a tyre gauge. The pressure should be 15kPa (2 psi) below cut-in pressure switch setting.
4. Replenish air if necessary, and replace air valve cap securely.

Trouble Shooting

1. Pump Not Delivering Water or Not Building Up Pressure:

May be caused by one or more of the following:–

- (a) Pump not properly primed;
- (b) Footvalve or checkvalve not installed or leaking;
- (c) Footvalve not installed below water level;
- (d) Suction lift too high;
- (e) Suction piping not correctly sealed or holed allowing air to enter pump suction;
- (f) Checkvalve installed in wrong direction;
- (g) Blocked jet or venturi in pump;
- (h) Insufficient water supply source.

2. Pump Not Starting:

May be caused by one or more of the following:–

- (a) Power failure;
- (b) Blown power fuse;
- (c) Motor overload tripped;
- (d) Motor windings faulty;
- (e) Pressure system not switching ON due to static delivery head causing higher pressure on the pump than the pressure switch cut-in setting;
- (f) Low voltage power supply causing overload to operate;
- (g) Motor or pump seized.

3. Pump (When Installed as Automatic Pressure System) Switching On and Off Frequently Or When No Taps Turned On:

May be caused by one or more of the following:–

- (a) Footvalve or checkvalve not retaining pressure or water;
- (b) Water leaking from suction or delivery piping;
- (c) Leaking ball valve in toilet cistern, hot water system or stock troughs;
- (d) Pressure tank not retaining air pressure or air charge too high;
- (e) Motor thermal overload tripping.

4. Pump (When installed as Automatic Pressure System) Not Switching Off Or Taking too Long to Switch Off:

May be caused by one or more of the following:–

- (a) Voltage supply too low;
- (b) Blocked jet or venturi in pump;
- (c) Leak in discharge pipe or fittings, taps etc.;
- (d) Worn or blocked pump components - impeller, pump body etc.;
- (e) Drop in water supply level.

DAVEY WATER PRODUCTS GUARANTEE FOR AUSTRALIA & NEW ZEALAND

This Davey product is guaranteed to be free of material or manufacturing defects at the time of original purchase. Should any part fail as a result of such defects within two years of original purchase, the product will be repaired free of charge.

TERMS AND CONDITIONS

1. This guarantee applies to all states and territories of Australia and New Zealand only and is subject to the provisions of the Trade Practices Act (Aust.), the Goods and Consumer Protection Legislation of the various Australian states and the Consumers Guarantee Act 1993 (NZ) as applicable.
2. The guarantee period commences on the date of original purchase of the equipment. Evidence of this date of original purchase must be provided when claiming repairs under guarantee. It is recommended you retain all receipts in a safe place.
3. This guarantee covers parts and workshop labour only. Goods should be forwarded, with proof of date of original purchase, to an Authorised Davey Service Centre freight paid.
4. This guarantee is subject to due compliance by the original purchaser with all directions and conditions set out in the Installation and Operating Instructions. Failure to comply with these instructions, damage or breakdown caused by fair wear and tear, negligence, misuse, incorrect installation, chemical or additives in the water, inadequate protection against freezing, rain or other adverse weather conditions, corrosive or abrasive water, lightning or high voltage spikes or through unauthorised persons attempting repairs are not covered under guarantee. The product must only be connected to the voltage shown on the nameplate.
5. Without limiting the original purchaser's entitlements under the Trade Practices Act (Aust.), the Goods & Consumer Protection Legislation of the various Australian states, or the Consumers Guarantee Act 1993 (NZ), Davey shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever arising directly or indirectly from the product or any defect.
6. Where the Trade Practices Act (Aust.), the Goods and Consumer Protection Legislation of the various Australian states and the Consumers Guarantee Act 1993 (NZ) does not apply, Davey shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever suffered by the purchaser arising directly or indirectly from the product or any defect and the purchaser shall indemnify Davey against any claim by any other person whatsoever in respect of any such loss, damage or injury.
7. Nothing in this guarantee is intended to have the effect of contracting out of the provisions of the Trade Practices Act (Aust.), the Goods and Consumer Protection Legislation of the various Australian states and Consumers Guarantee Act 1993 (NZ) except to the extent permitted by the various Acts and this guarantee is to be modified to the extent necessary to give effect to that intention.
8. Davey may be collecting personal information from you in order to provide you with a service. Davey Water Products Pty Ltd promises only to use this information in accordance with the Provisions of the Privacy Act 1988 (Cth) and the Privacy Policy of Davey Water Products Pty Ltd which is available at davey.com.au.

® Davey is a registered trademark of Davey Water Products Pty Ltd. © Davey Water Products Pty Ltd 2000



Davey Water Products Pty Ltd

Member of the GUD Group
ABN 18 066 327 517

Head Office and Manufacturing

6 Lakeview Drive,
Scoresby, Australia 3179
Ph: +61 3 9730 9222
Fax: +61 3 9753 4100
Website: davey.com.au

Customer Service Centre

Ph: 1300 367 866
Fax: 1300 369 119
E-mail: sales@davey.com.au

Interstate Offices

Sydney • Brisbane • Adelaide
Perth • Townsville

International

6 Lakeview Drive,
Scoresby, Australia 3179
Ph: +61 3 9730 9222
Fax: +61 3 9753 4248
AH: +61 3 9730 9121
E-mail: export@davey.com.au

Germany

Kantstrasse 53,
04275 Leipzig
Ph: +49 341 301 0412
Fax: +49 341 301 0413
E-mail: akrenz@daveyeurope.com

New Zealand

7 Rockridge Avenue,
Penrose, Auckland 1330
Ph: +64 9 570 9135
Fax: +64 9 527 7654
Website: daveynz.co.nz
E-mail: sales@daveynz.co.nz

U.S.A. - Davey Pumps Inc.

1005 N. Commons Drive
Aurora, Illinois 60504
Ph: +1 630 898 6976
Fax: +1 630 851 7744
Website: daveyusa.com
E-mail: sales@daveyusa.com